## **FS-1 REPACKING GUIDE**



Please be sure to include all components of the inversion table in your returned order, including the accessories and instructions, otherwise you may not be eligible for a complete refund.

Begin by using the original box and bags that came with the inversion table. If you do not have the original box, contact Teeter Customer Service at 800-847-0143. Product returned in an unauthorized packing container may not be eligible for a complete refund.

NOTE: Figures do not show all bags used in repacking for easier viewing of box assembly.

Figure 1: Start by disconnecting the inversion table into its primary components: Table Bed, A-Frame, Main Shaft with Ankle System, Accessories, Hardware, Handles, and Roller Hinges. DO NOT disassemble the product into more components than the parts listed below.

(1) Table Bed

(3) Main Shaft with Ankle System

- (4) Accessories & Hardware
- (2) A-Frame
- (6) Roller Hinges

(5) Handles

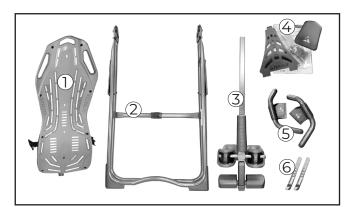


Figure 1

Figure 2: Ensure all the accessories have been removed from the Table Bed and place the Table Bed face-down on the floor. Remove the two Bolts from the Support Beam by using the 6mm Allen Wrench to steady the bolts, and then loosen the Nuts from the Bolts with the 10/13mm

Open-Ended Wrench.

Figure 2

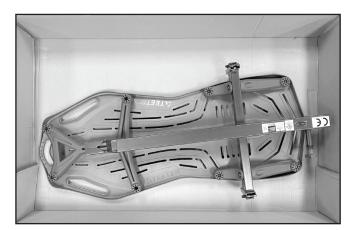


Figure 3: Start repacking the inversion table by placing the Table Bed face-down into the box off to one side as shown.

**Figure 4a & 4b:** Position the A-Frame in the box by first pulling up on the Support Beam of the Table Bed with one hand and overlapping it over the Crossbar of the A-Frame while sliding the A-Frame into the box as shown.




Figure 4a

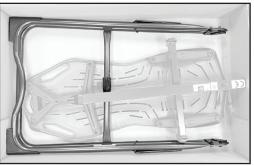


Figure 4b

**Figure 5a & 5b:** Close the Deluxe EZ-Reach Ratchet to the smallest setting. Place the Main Shaft with Ankle Lock into the Large Bag to prevent scratching. Place the Ankle Lock face-down next to the Table Bed as shown.

**Figure 6:** Slide the Handles and Roller Hinges into a Medium Bag. Slide the small Accessories, Hardware, and Product Support Materials into a Small Bag and pack all the parts as shown. The larger Accessories including the Lumbar Bridge and Head Pillow can remain loose in the box.

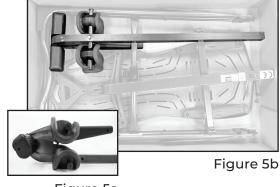


Figure 5a



Figure 6

Seal the large box securely with packing tape, affix the return label and mark your Return Authorization Number (RA #) on the outside panel of the box.

**IMPORTANT:** Teeter Inversion Tables cannot be returned without a Return Authorization Number. Please contact Teeter Customer Service at **(800) 847-0143** or email **info@teeter.com** for assistance.



USA: Teeter 9713 233rd Ave E, Suite A Bonney Lake, WA 98391 Toll Free: 800-847-0143 Fax: 800-847-0188 teeter.com | info@teeter.com International: Teeter International, Ltd. Gor-Ray House 758 Great Cambridge Rd Enfield Middlesex ENI 3GN United Kingdom teeterintl.com | info@teeterintl.com