



**GET STARTED**

Assembly & User Guide

# FreeStep® Recumbent Cross Trainer

Follow along with these instructions

**OR**

Scan to download the free BILT app  
and search 'Teeter' in app.




**BILT.**

3D Interactive Instructions

# WELCOME TO THE TEETER FAMILY

Congratulations on your purchase of the Teeter FreeStep! In order to utilize this product to its fullest extent, it is critical that you follow, read, and fully understand the Assembly Instructions & User Guide. The FreeStep is a multiple user, reusable device for home use, intended to provide a comfortable, zero-impact workout for adults.

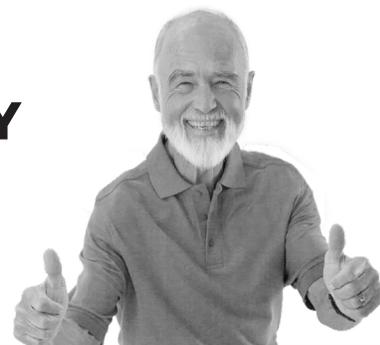

“ I created Teeter so people could live healthier and more active lives. ”

-Roger Teeter



## CONTACT

CUSTOMER SERVICE

If you have any questions concerning assembly or if any parts are missing, DO NOT RETURN THE ITEM TO THE STORE OR CONTACT THE RETAILER. Our dedicated product service experts can help! Contact Teeter Customer Service at **800-847-0143**, or via online forms or Live Chat at **teeter.com**.



## FULL PRODUCT WARRANTY

Trust Teeter for unmatched quality and performance, backed by our industry-leading warranty coverage. To register your product warranty, go to **teeter.com/Support/Warranty-Registration**.

## TABLE OF CONTENTS

### Assembly Instructions

Important Safety Instructions .....	1
Items for Assembly .....	2
A Guide to Your FreeStep .....	3
Safety Warning Labels and Product Specifications .....	4
Assembly Steps .....	5 – 12

### User Guide

Use Instructions .....	13 – 19
Warranty and Registration .....	20
Terms and Conditions .....	22 – 23

**BEFORE YOU BEGIN:** Review all steps before beginning assembly and read all precautions before using the Teeter FreeStep. Carefully adhere to the Assembly Instructions and User Guide to help ensure safety and product integrity.

**IMPORTANT SAFETY INSTRUCTIONS**  
**READ ALL INSTRUCTIONS BEFORE USING THE TEETER FREESTEP**

**⚠ WARNING**

**FAILURE TO FOLLOW INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.**

To reduce the risk of injury:

- Read and understand all the instructions, review all other accompanying documents, and inspect the equipment before use. It is your responsibility to familiarize yourself with the proper use of this equipment and the inherent risks of exercise equipment if these instructions are not followed, such as, pinching, entrapment, equipment failure, or aggravating a pre-existing medical condition. It is the responsibility of the owner to ensure that all users of the product are fully informed about the proper use of the equipment and all safety precautions.
- **ALWAYS** consult with your doctor before beginning any exercise or weight-loss program, especially if you are over the age of 35 or have any known pre-existing medical problems. This may include injury or illness, but also the side effects of any drug or supplement (prescribed or over-the-counter).
- The instructions and advice presented in this User Guide are in no way intended as a substitute for medical advice or counseling.
- **DO NOT** continue using the equipment if you feel pain, discomfort, shortness of breath, chest tightness, or become light-headed or dizzy while exercising. STOP and seek medical advice. Call 911 if you are having an emergency health condition.
- **DO NOT** use if you are over 300 lb (136 kg). Structural failure and physical injury could occur.
- **ALWAYS** ensure that all adjustable features are accurately adjusted to the users' body proportions and all parts are fully tightened and secured before use. **ALWAYS** hold the Handles or Seat Handles when mounting, dismounting, or using equipment.
- **DO NOT** place hands or feet near linkages while in use. The linkages are flywheel driven and can cause serious injury, entrapment, or death. **DO NOT** allow pets or children to approach the linkage while it is moving.
- **DO NOT** place any objects within a 24" (61 cm) radius of the machine. Do not place any objects or body parts behind the pivot area of the pedals.
- **ALWAYS** reduce pedal speed in a controlled manner. Pedals continue to spin when you stop pedaling.
- **DO NOT** allow children to use this machine. Keep children, bystanders, and pets away from machine at all times and **DO NOT** allow children to be left unattended in the same room as the equipment. The FreeStep is not intended for use by persons with reduced physical, sensory or mental capabilities, unless they are given supervision and instruction concerning use of the machine by a person responsible for their safety.
- **ALWAYS** wear appropriate clothing while exercising with the machine. **DO NOT** wear loose clothing that could get entangled in the equipment. **ALWAYS** wear athletic shoes to protect feet while exercising with the machine.
- **ALWAYS** store indoors and on a level surface. This equipment is not intended for outdoor use.
- **DO NOT** use in any commercial, rental or institutional setting. This product is intended for home-use only.
- **ALWAYS** use this equipment only for its intended use as described in this manual. **DO NOT** use attachments not recommended by manufacturer.
- **DO NOT** drop or insert any object into any opening or place any sharp objects near the equipment. Keep body parts, hair, loose clothing and jewelry clear of all moving parts.
- **DO NOT** operate equipment while under the influence of drugs, alcohol, or medication that may cause drowsiness or disorientation.
- **ALWAYS** inspect the equipment prior to use. Make sure all fasteners are secure and adjustable settings are secure.
- **ALWAYS** replace defective components immediately and/or keep the equipment out of use until repaired.
- **ALWAYS** position equipment on a level surface and away from water or ledges that could lead to accidental immersion or falls.
- **ALWAYS** use a damp cloth when cleaning. **DO NOT** use abrasive soaps or solvents to clean as this could cause damage to the machine.
- Refer to additional warning notices posted on the equipment. If a product label or User Guide should become lost, damaged or illegible, contact Customer Service at 800-847-0143 for a replacement.

**SAVE THESE INSTRUCTIONS**

# ITEMS FOR ASSEMBLY

Parts are not shown to scale. Parts may vary slightly from images depending on model.

ITEM NO. ITEM NAME

## Base / Resistance Grip

- SE2101 Base (LT1)
- SE2332 Base (LT3)
- SE2205J Resistance Grip

## Rear Stabilizer

- SE1102 Rear Stabilizer
- HK1042 Step 1a Hardware Kit

## Rear Stabilizer Cover Set

- SE1103 Rear Stabilizer Cover (2)
- HK1043 Step 1b Hardware Kit

## Pedals

- SE2104 Pedal (2) (LT1)
- SE2304 Pedal (2) (LT3)
- HK2044 Step 2 Hardware Kit

## Console Front Support Bar

- SE1107 Console Front Support Bar
- HK1047 Step 4a Hardware Kit

## Handles

- SE1111 Handle (2) (LT1)
- SE2311 Handle (2) (LT3)

ITEM NO. ITEM NAME

## Handle Support Tubes

- SE2108 Handle Support Tube (2)
- HK1048 Step 4b Hardware Kit

## Seat Back Assembly

- SE1105 Seat Back Assembly
- HK1045 Step 3a Hardware Kit

## Lower Seat

- SE1106 Lower Seat (LT1)
- SE2306 Lower Seat (LT3)
- HK1046 Step 3b Hardware Kit

## Pedal Arm Joint Cover Sets

- SE1109 Pedal Arm Joint Cover (4)
- HK1049 Step 5 Hardware Kit


## Upper Front Leg Cover Set

- SE1110 Upper Front Leg Cover (4)
- HK1049 Step 5 Hardware Kit

## Tools

- SE1112 Allen Wrench / Screwdriver


### Base w/ Resistance Grip

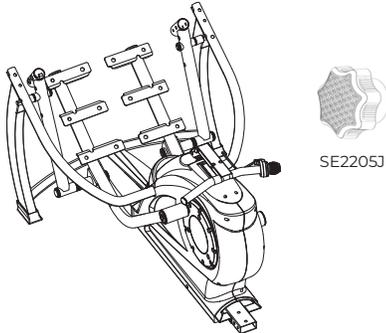

SE2101 (LT1) / SE2332 (LT3)

### Pedals


Use with Step 2 Hardware Kit (HK2044)

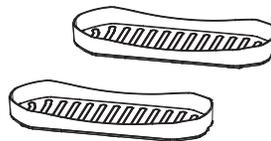

SE2104 (LT1) / SE2304 (LT3)

### Pedal Arm Joint Cover Sets


Use with Step 5 Hardware Kit (HK1049)

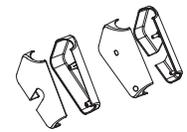

SE1109

### Console Front Support Bar


Use with Step 4a Hardware Kit (HK1047)

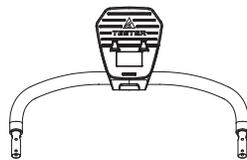

SE1107

### Handle Support Tubes


Use with Step 4b Hardware Kit (HK1048)

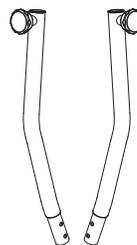

SE2108

### Upper Front Leg Cover Sets


Use with Step 5 Hardware Kit (HK1049)

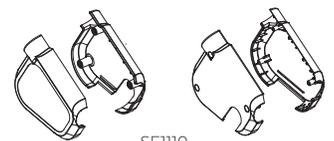

SE1110

### Rear Stabilizer


Use with Step 1a Hardware Kit (HK1042)



SE1102

### Rear Stabilizer Cover Set


Use with Step 1b Hardware Kit (HK1043)

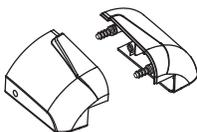

SE1103

### Seat Back Assembly


Use with Step 3a Hardware Kit (HK1045)

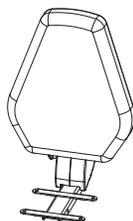

SE1105


### Lower Seat

Use with Step 3b Hardware Kit (HK1046)

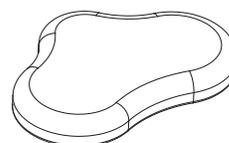

SE1106 (LT1) / SE2306 (LT3)

### Handles

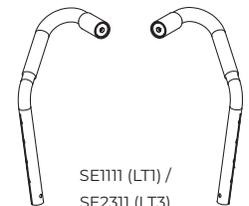

SE1111 (LT1) / SE2311 (LT3)


### Tools Provided for Assembly



Allen Wrench /  
Screwdriver  
SE1112

# A GUIDE TO YOUR FREESTEP

Before reading further, study the drawing below to familiarize yourself with the important components of your Teeter FreeStep.

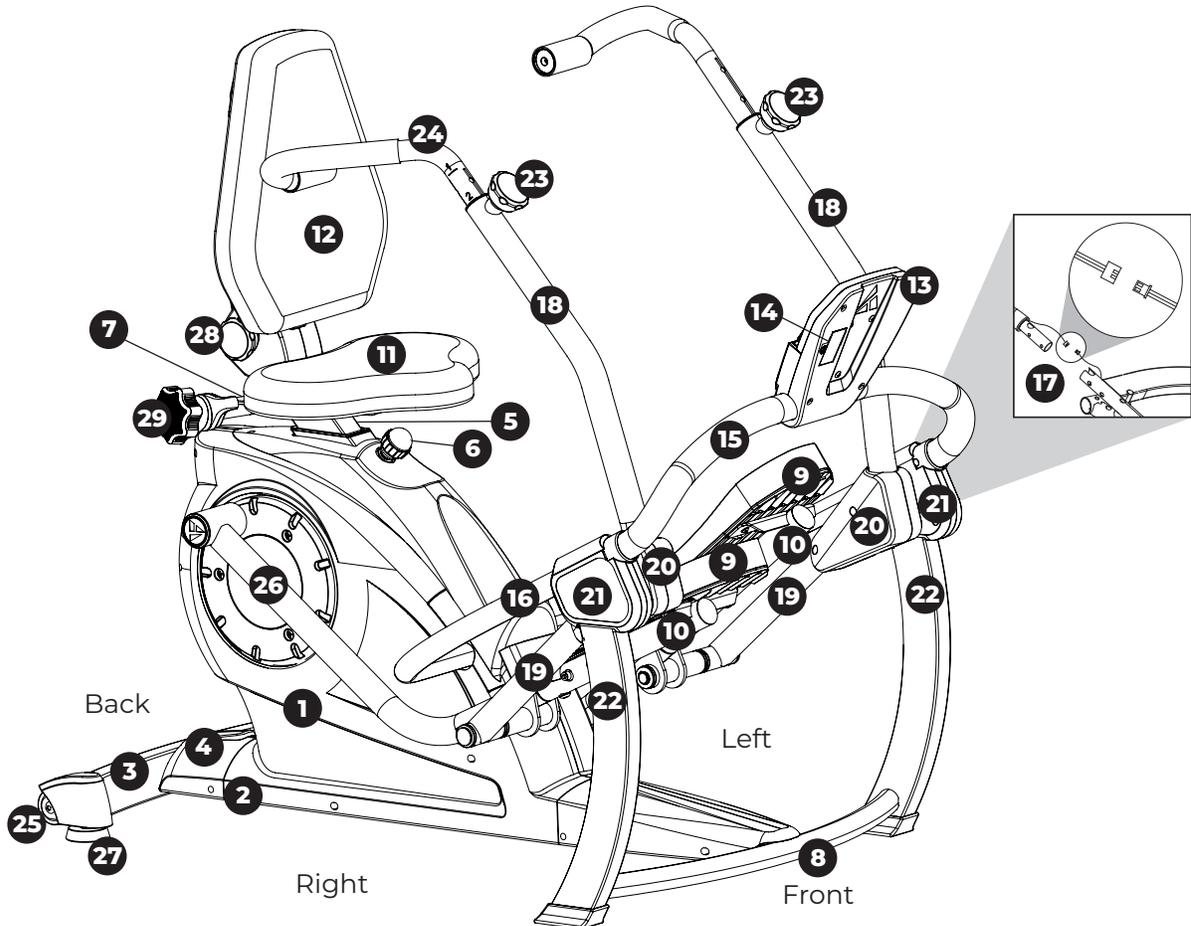

Your actual model may vary from the model shown.


- |           |                           |           |                            |           |                            |
|-----------|---------------------------|-----------|----------------------------|-----------|----------------------------|
| <b>1</b>  | Base                      | <b>11</b> | Lower Seat                 | <b>21</b> | Upper Front Leg Cover Sets |
| <b>2</b>  | Main Support Tube         | <b>12</b> | Seat Back Assembly         | <b>22</b> | Upper Front Leg            |
| <b>3</b>  | Rear Stabilizer           | <b>13</b> | Console                    | <b>23</b> | Handle Adjustment Knobs    |
| <b>4</b>  | Rear Stabilizer Cover Set | <b>14</b> | Battery Compartment        | <b>24</b> | Handles                    |
| <b>5</b>  | Seat Post                 | <b>15</b> | Console Front Support Bar  | <b>25</b> | Transport Wheels           |
| <b>6</b>  | Height Adjustment Knob    | <b>16</b> | Lower Console Support Tube | <b>26</b> | Linkage                    |
| <b>7</b>  | Seat Handle               | <b>17</b> | Speed Sensor Wire          | <b>27</b> | Leveling Feet              |
| <b>8</b>  | Front Crossbar            | <b>18</b> | Handle Support Tubes       | <b>28</b> | Seat Back Adjustment Knob  |
| <b>9</b>  | Pedals                    | <b>19</b> | Upper Pedal Arm            | <b>29</b> | Resistance Grip            |
| <b>10</b> | Base Pedal Arms           | <b>20</b> | Pedal Arm Joint Cover Sets |           |                            |

# SAFETY WARNING LABELS & PRODUCT SPECIFICATIONS

## IMPORTANT:

Please review all labels and supporting materials before using your FreeStep.

This drawing indicates the locations of the warning labels found on your product (image and labels below not shown at actual size). If a label is missing, illegible or is removed, contact Teeter Customer Service to request a complimentary replacement label.

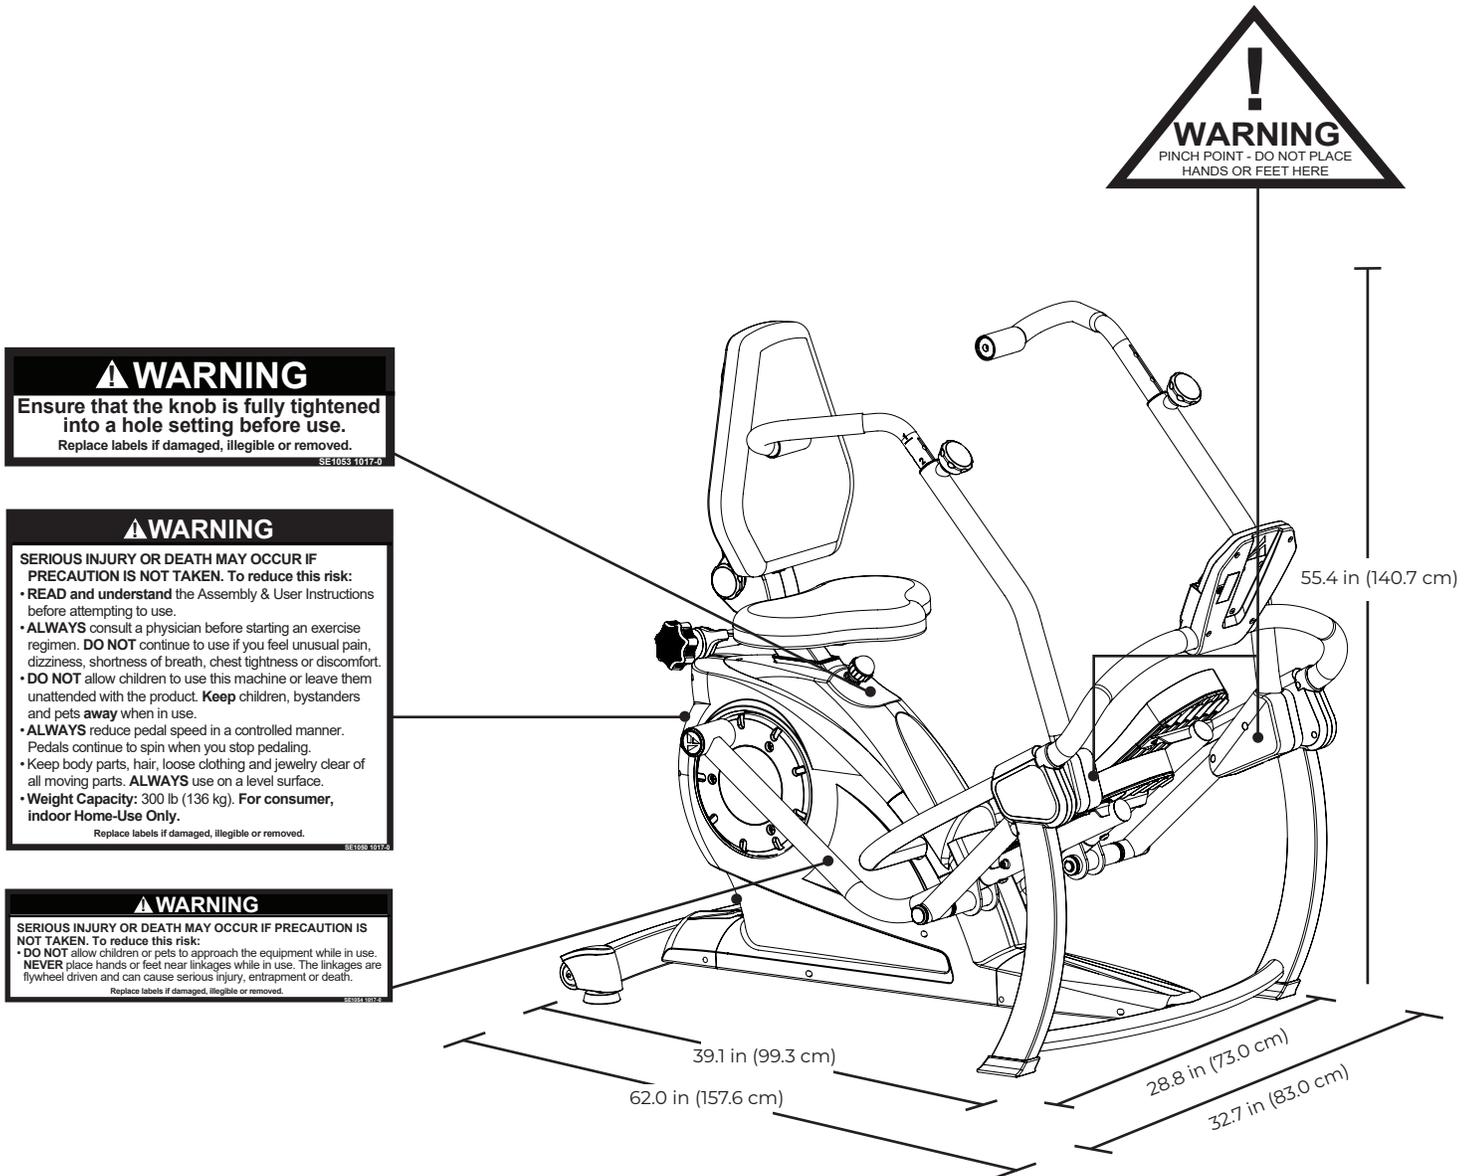

Dimensions (Base):

39.1 x 28.8 x 55.4 in (99.3 x 73.0 x 140.7 cm)

Dimensions (Max):

62.0 x 32.7 x 55.4 in (157.6 x 83.0 x 140.7 cm)

Weight:

LT1: 106.9 lb (48.5 kg) / LT3: 110.2 lb (50.0 kg)

# LET'S GET STARTED



## Unpack and Prepare Your Workspace

Follow the instructions on the outside of the box for the easiest unpacking process.

If possible, assemble the equipment at or near the space in which you intend to use it to avoid moving it later.

Unpack all parts and support materials.  
Set aside packing materials and clear your work area.

Locate the **Hardware Kits** inside the box.  
They are labeled to correspond with the assembly process.

## STEP 1 ASSEMBLE REAR STABILIZER

**NOTE:** Always hand tighten all the bolts or screws in each step before fully tightening with the wrench or screwdriver. For reference, the Front, Back, Right and Left of the equipment is labeled on Page 3.

### Attach Rear Stabilizer

**Figure 1:** Remove the Base from the packaging and position it on a level surface on the floor.

Remove the wooden plug from the Main Support Tube in the back of the Base and set aside.

Lift the Base slightly from the back and insert the Rear Stabilizer into the Main Support Tube at the back of the Base.

**TIP:** The wooden plug can be used to prop up the base to make inserting the screws into the Rear Stabilizer easier.

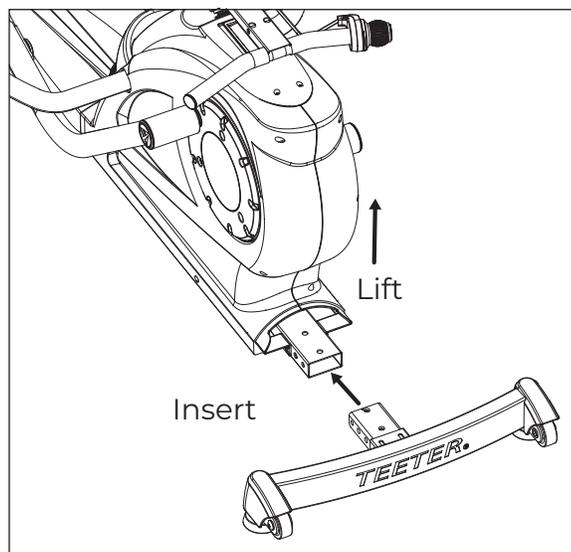


Figure 1

**Figure 2:** Use the **Step 1a Hardware Kit** to attach the Rear Stabilizer.

First hand tighten 6 × Bolts with 6 × Spring washers and 6 × Washers on the Rear Stabilizer Joint. The Spring Washers should always be between the Bolt Head and the Washer.

Use the Allen wrench to fully tighten each bolt.

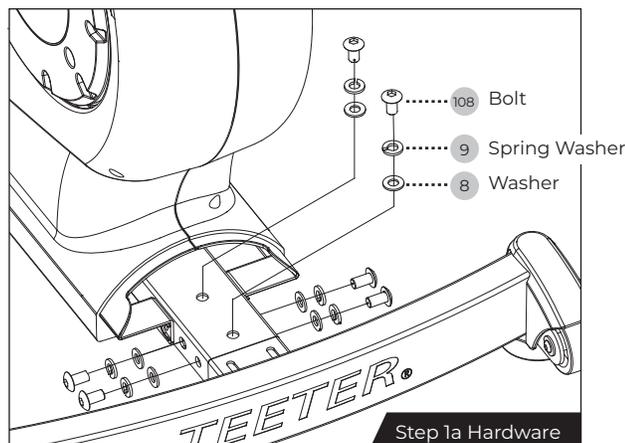


Figure 2

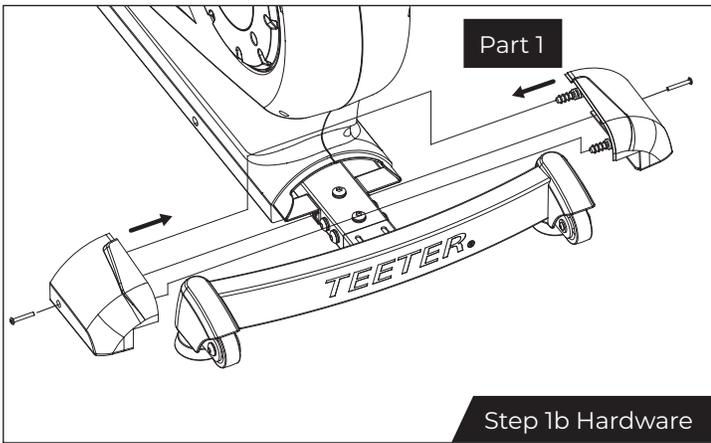


Figure 3

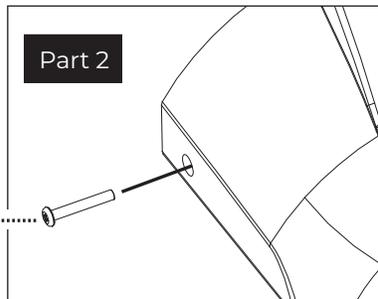


Figure 3a

### Attach Rear Stabilizer Cover Set

**Figure 3:** Locate the Rear Stabilizer Cover Set, noting the Right and Left markings, and the **Step 1b Hardware Kit**.

**Part 1** Complete this first before Part 2.

Attach the Right Rear Stabilizer Cover by loosely tightening the 1 x Machine Screw.

**Part 2**

**Figure 3a:** Attach the Left Rear Stabilizer

Cover to the Right by joining the alignment pegs and pushing together for a snug fit.

Insert 1 x Machine Screw to secure the Left Rear Stabilizer, then finish tightening both Machine Screws with the Screwdriver.

## STEP 2 ASSEMBLE PEDALS

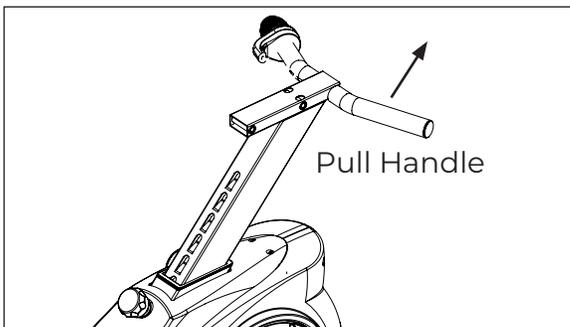


Figure 4

**Figure 4:** Locate the Seat Post and raise it to the highest position by loosening the Height Adjustment Knob and pulling up on the Seat Handle.

### CAUTION

Use caution to avoid tipping and when lifting heavy objects.

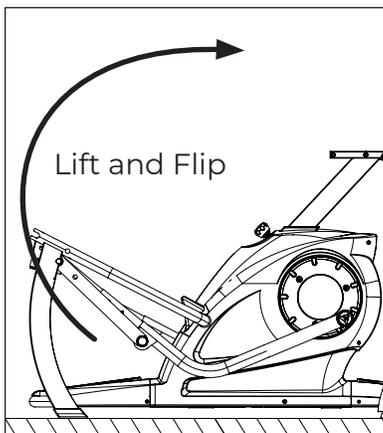


Figure 5

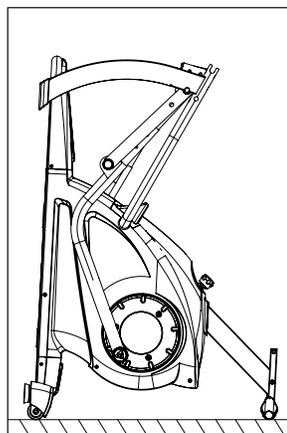
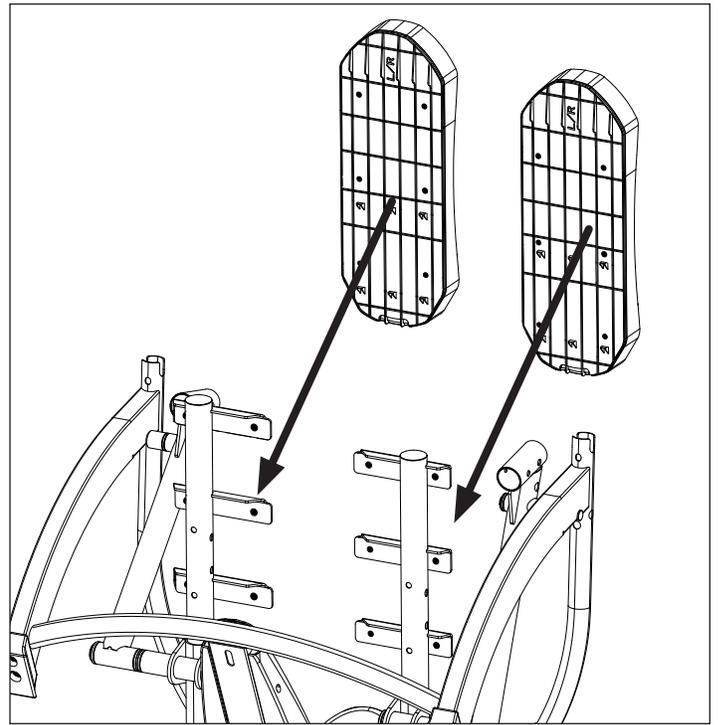


Figure 6

**Figure 5-6:** To have better access while installing the pedals, position the FreeStep to rest on its back side by lifting up on the Front Crossbar and rotating on the Rear Stabilizer until the Seat Post is resting on the ground.

**Figure 7:** Locate the Pedals, noting that both pedals are marked with both Left and Right markings. This means it does not matter which side the Pedals are installed on. When installing the Pedals, be sure that the L/R markings are pointing toward the Front of the FreeStep. Align each Pedal to the corresponding Base Pedal Arm.

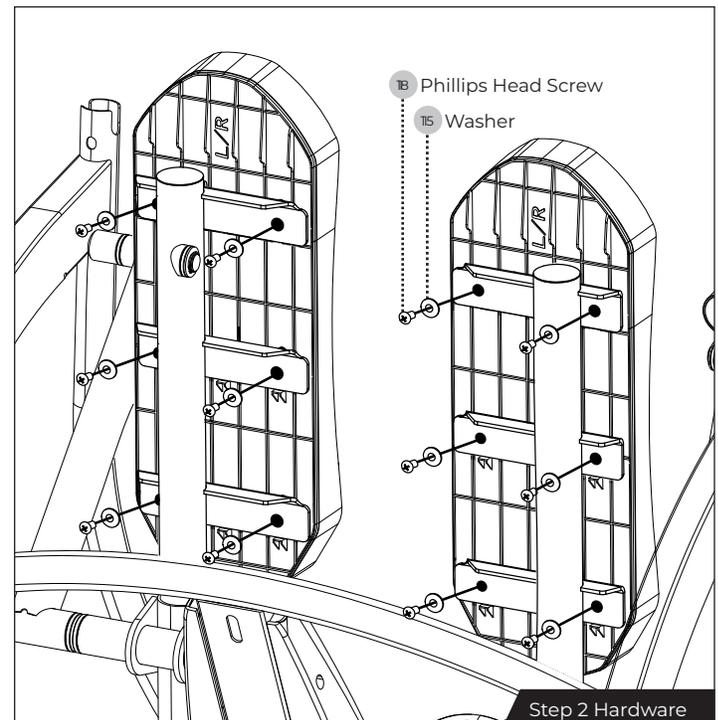


**Figure 7**

**Figure 8:** Use the **Step 2 Hardware Kit** to attach the Pedals. Hand tighten 12 × Phillips Head Screws with 12 × Washers as shown.

Proceed to fully tighten all the Phillips Head Screws with the Phillips Head Screwdriver.

Once the Pedals are installed, return the FreeStep to the upright position by lowering the Front Crossbar and rotating on the Rear Stabilizer.



**Figure 8**

# STEP 3

# ASSEMBLE SEAT

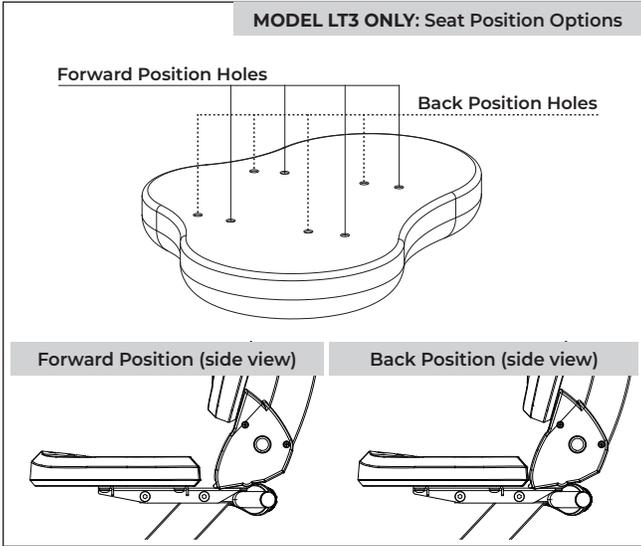


Figure 9

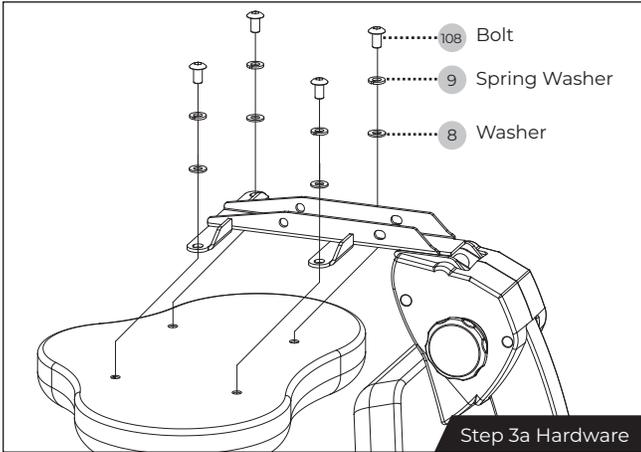


Figure 10

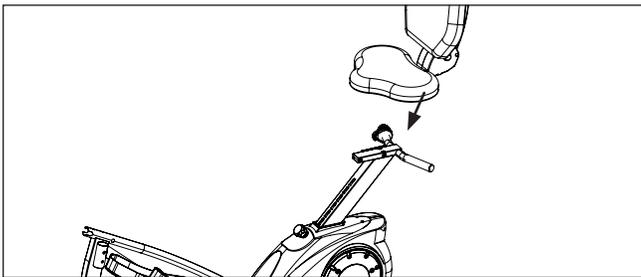


Figure 11

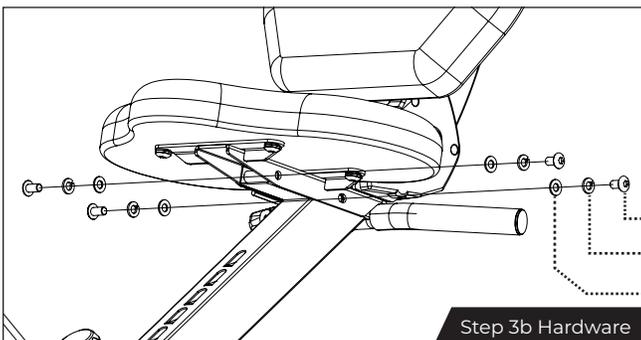


Figure 12

## Seat Installation - Model LT3 only

Skip this step for Model LT1.

**Figure 9:** The Model LT3 has two Lower Seat assembly options. Before installing the seat, use this figure to determine the Position Holes that will be used during installation. The Forward Position provides the largest surface area of support during use. The seat can be adjusted after assembly if needed.

## All Models

Locate the Lower Seat and place it upside-down on a flat surface, such as the edge of a table. Locate the Seat Back Assembly and line it up with the Lower Seat.

**Figure 10:** Use the **Step 3a Hardware Kit** to assemble the seat parts. Hand tighten 4 × Bolts with 4 × Spring Washers and 4 × Washers as shown. Proceed to fully tighten the Bolts with the Allen Wrench.

**Figure 11:** Before attaching the assembled Seat to the Seat Post, make sure the Seat Post is fully raised for better access, then line the Seat up with the Seat Post.

**Figure 12:** Use the **Step 3b Hardware Kit** to attach the Seat. Hand tighten 4 × Bolts with 4 × Spring Washers and 4 × Washers as shown. Proceed to fully tighten the Bolts with the Allen Wrench.

## STEP 4

# ASSEMBLE SUPPORTS

### Console Front Support Bar Installation

**IMPORTANT:** Do not pull or pinch the Speed Sensor Wire during the Console Front Support Bar Installation.

**Figure 13:** Open the Battery Compartment located on the back of the console. Ensure that the battery contacts and compartment are clean. Locate the (2) included batteries (AA 1.5 V Alkaline) and install them in the back of the Console in the Battery Compartment, noting (+) and (-) symbols.

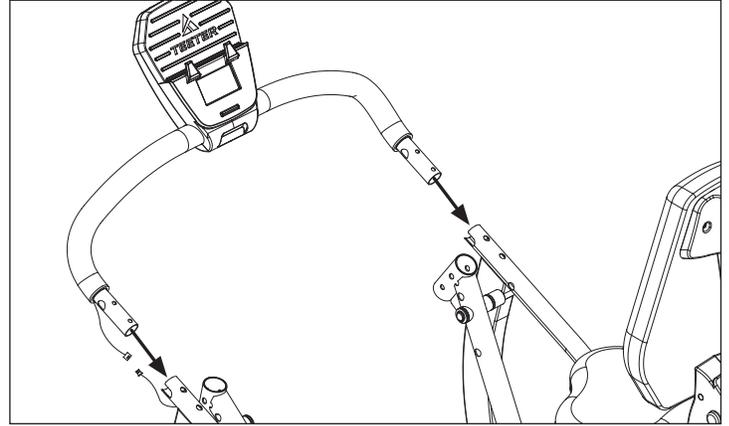


Figure 13

Ensure that the Speed Sensor Wires remain on the outside. Align both ends of the Console Front Support Bar with the Lower Console Support Tube and insert.

**Figure 14:** Carefully connect the Speed Sensor Wires.

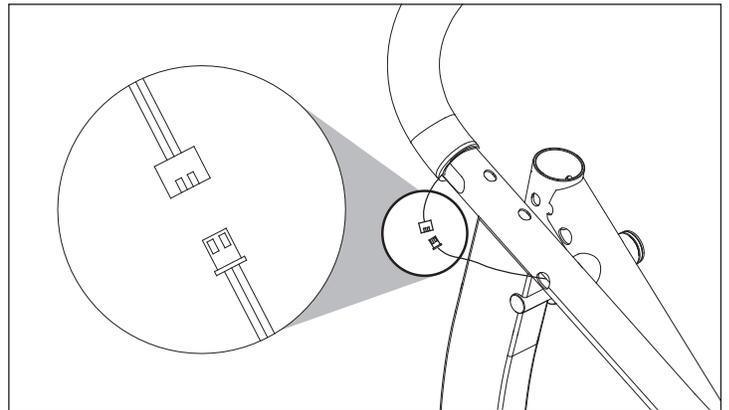


Figure 14

**Figure 15:** Use the **Step 4a Hardware Kit** to attach the Console Front Support Bar. Hand tighten 4 × Bolts with 4 × Curved Washers as shown. The Curved Washers should wrap around the shape of the Lower Console Support Tube.

Proceed to fully tighten the Bolts with the Allen Wrench.

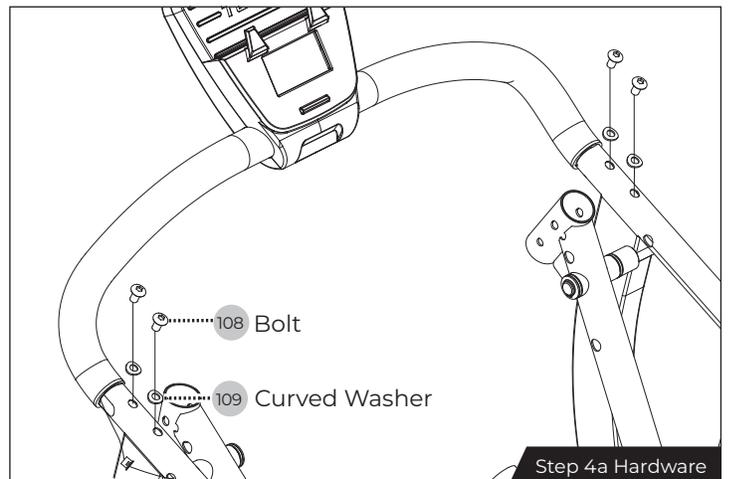


Figure 15

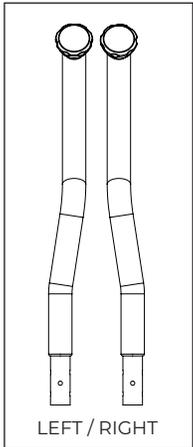


Figure 16a

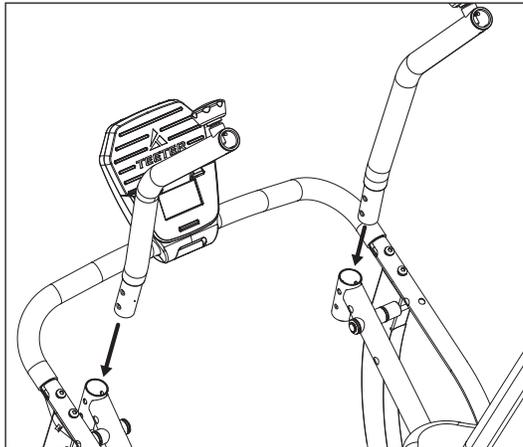


Figure 16b

## Handle Support Tube Installation

**Figure 16a-16b:** Locate the Handle Support Tubes, noting Right and Left markings. Insert the bottom of each Handle Support Tube into the top of the Upper Pedal Arm.

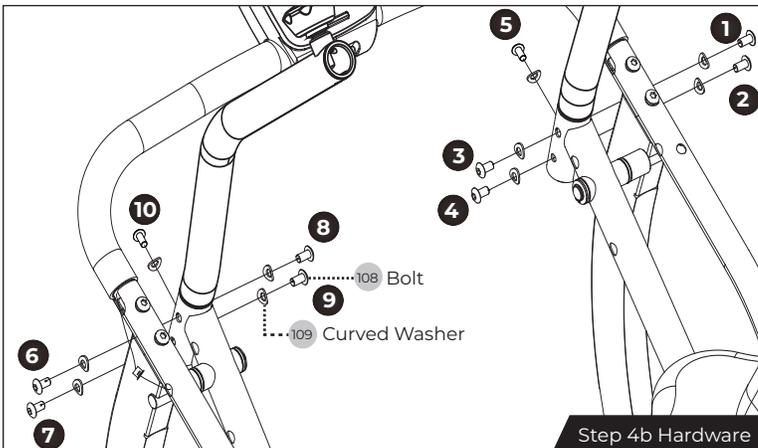


Figure 17

**Figure 17:** Use the **Step 4b Hardware Kit** to attach the Handle Support Tubes.

**IMPORTANT:** Very loosely install 10 x Bolts with 10 x Curved Washers 2-3 turns. The Curved Washers should wrap around the shape of the Upper Pedal Arms. After all hardware has been installed 2-3 turns, there should still be 1-2 washer thicknesses of space between the washer and the base metal. This is important for the next step so that the Handle Support Tubes properly move into place as the hardware is fully tightened. Proceed to tighten all 10 Bolts in the **EXACT** order as shown with the numbers in Figure 17 with the Allen Wrench.

# STEP 5

# ASSEMBLE COVER SETS

## Upper Front Leg Cover Sets Installation

**IMPORTANT:** Make sure the Speed Sensor Wire sits under the Left Upper Front Leg Cover Set and is not pinched during installation.

**TIP:** In order to gain better access to the screw holes while assembling the Upper Front Leg Cover Sets, adjust the position of the Pedal Arm Joints by pushing forward or pulling backward on the Handle Support Tubes.

**Figure 18:** Locate the Upper Front Leg Cover Sets, noting Right and Left markings. Pair each set over the corresponding Right and Left Upper Front Leg.

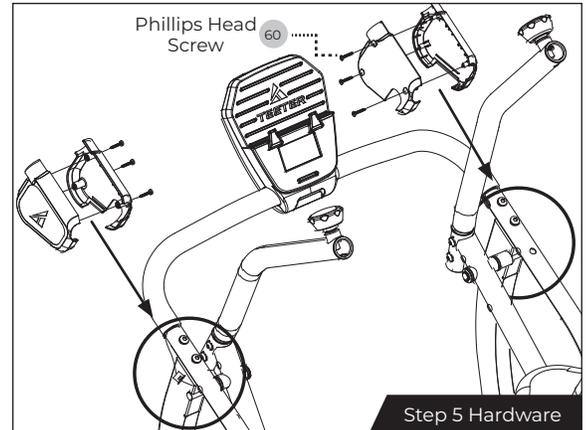


Figure 18

**Figure 18-19:** Use the **Step 5 Hardware Kit** to install the Upper Front Leg Cover Sets. Partially tighten 3 × Phillips Head Screws using the Screwdriver provided on each set as shown. Ensure they are properly aligned and proceed to fully tighten the Phillips Head Screws with the Screwdriver.

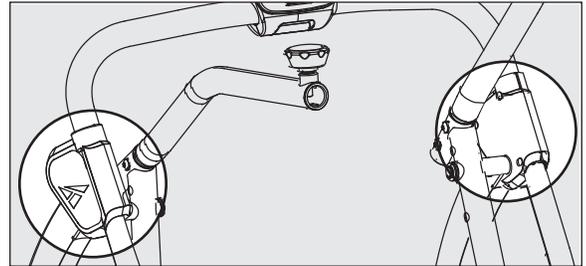


Figure 19

## Pedal Arm Joint Cover Sets Installation

**Figure 20:** Locate the Pedal Arm Joint Cover Sets, noting Right and Left markings.

Pair each set over the corresponding Right and Left Pedal Arm Joints.

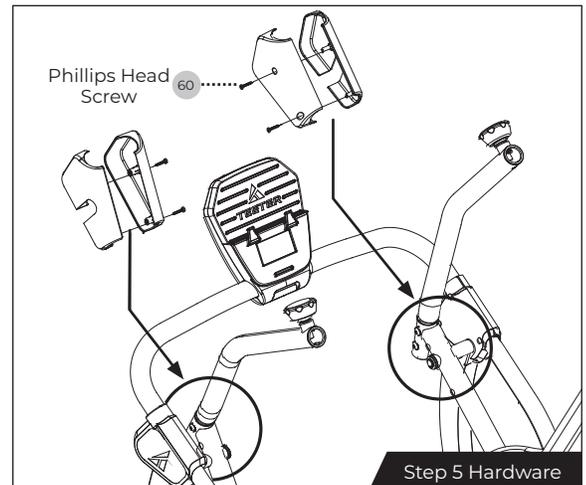


Figure 20

**Figure 20-21:** Use the **Step 5 Hardware Kit** to install the Pedal Arm Joint Cover Sets. Partially tighten 2 × Phillips Head Screws on each set as shown. Ensure they are properly aligned and proceed to fully tighten the Phillips Head Screws with the Screwdriver.

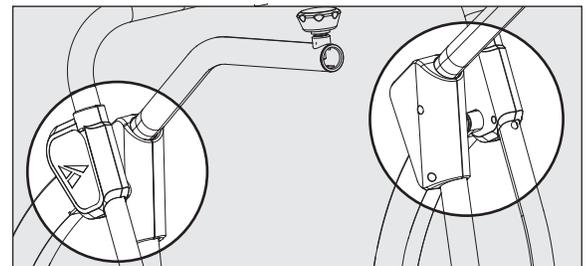


Figure 21

## STEP 6

## ASSEMBLE HANDLES

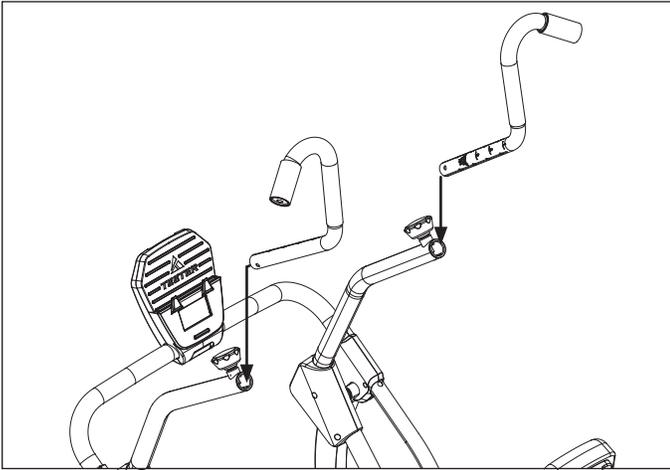


Figure 22

### Handle Installation

**Figure 22:** Loosen the Handle Adjustment Knobs on the right and left Handle Support Tubes by turning the knobs counter-clockwise, then pulling outward.

Locate the Handles, noting Right and Left markings. With the top of the handles pointing outward, insert both Handles into the corresponding Handle Support Tube. Adjust Handles as desired and tighten Handle Adjustment Knobs by releasing into a hole setting and then rotating clockwise.

### CORRECT

Handles are assembled correctly.

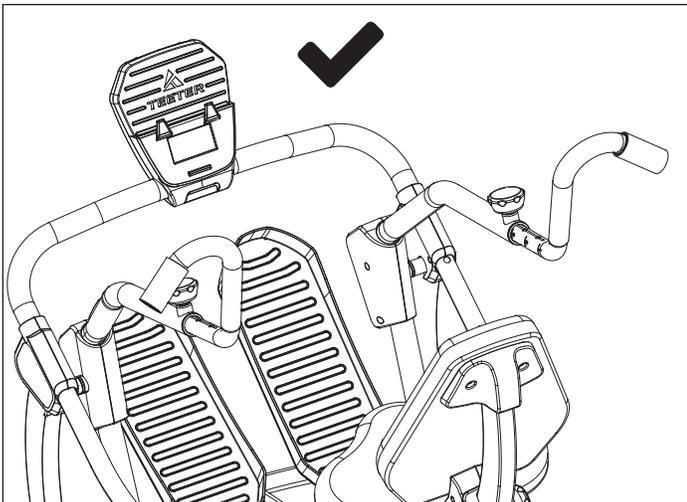


Figure 23

### INCORRECT

Handles are switched / need to be corrected.

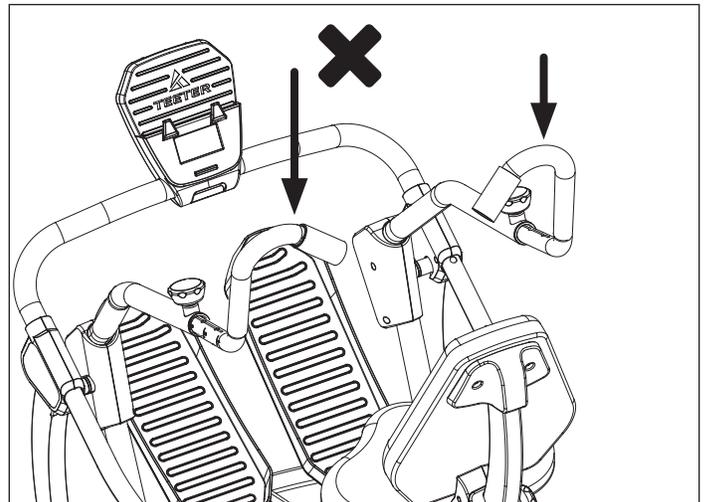


Figure 24

## STEP 7

## ASSEMBLE RESISTANCE GRIP

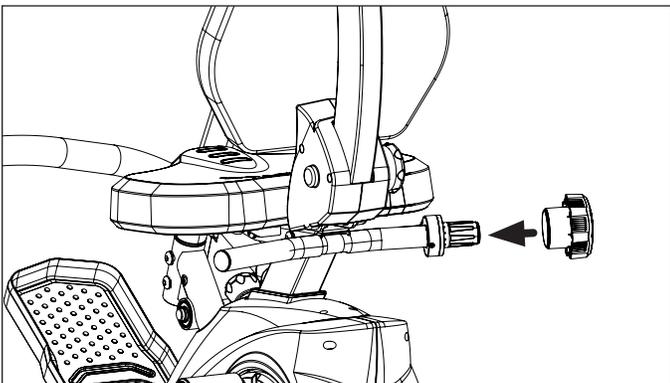


Figure 25

### Resistance Grip Installation

**Figure 25:** Locate the Resistance Grip. Align the recessed notch on the Resistance Grip with the number 13 on the Resistance Base Assembly. Slide the open end of the grip over the Resistance Base Assembly so that the grooves on the grip and base align. Push to snap into place.

# USER GUIDE

## Leveling

**Figure 26:** Make sure your FreeStep is on a flat, stable surface. Locate the 2 × Leveling Feet as shown. If any of the feet are not resting flat on the ground, rotate them clockwise to lower them until they reach the ground.

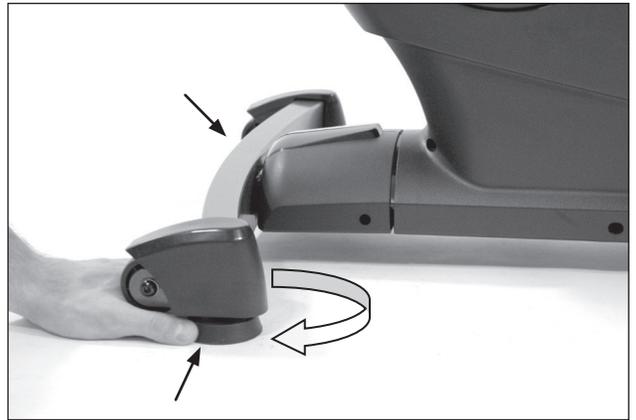


Figure 26

## Transporting

### ⚠ CAUTION

The FreeStep weighs over 100.0 lb (45.4 kg). Use caution when lifting to avoid injury and when rolling on floors to avoid damage to delicate surfaces like wood flooring.

**Figure 27:** The Transport Wheels are located on the back of the Rear Stabilizer. To transport, first lift from the Console Front Support Bar and then from the Front Crossbar. Move the FreeStep by rolling on the Transport Wheels as shown.



Figure 27

## Water Bottle Holder

**Figure 28-29:** Enjoy the convenience of easy access to your water bottle and smart device during your workout.



Figure 28

## Device Holder



Figure 29

# USER GUIDE

## ⚠ CAUTION

**ALWAYS** adjust Seat height first before use to avoid injury to the knees. Proper feet placement and seat height will ensure that your knees never travel over your toes when bent, and that your leg does not lock out in full extension.



Figure 30



Figure 31

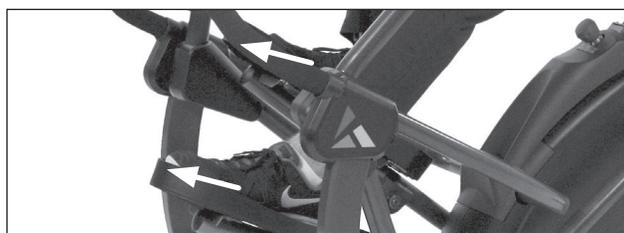


Figure 32



Figure 33

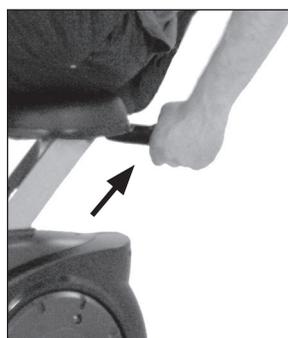


Figure 34



Figure 35

## Set Seat Height

**Figure 30:** To properly set the Seat height, start with the seat in the lowest position. To lower the Seat height, first loosen the Height Adjustment Knob by turning it counter-clockwise.

**Figure 31:** Pull outward on the spring-loaded Height Adjustment Knob while pushing the Seat Handle downward. Release the Height Adjustment Knob into the lowest hole setting.

**Figure 32:** Sit down on the Seat and place your toes toward the top of the pedals, which for most people is where you should position your feet during use. Extend to **FULL STRIDE** with one leg.

**Figure 33:** If the knee on your extended leg is just slightly bent, then you have found your ideal Seat height setting.

If the knee is locked out, then you have found your Height setting but will need to shift your foot position on the pedal to allow for a slight bend in the knee during use.

If the knee is bent too much (beyond a few degrees), then you will need to raise the Seat height.

**Figure 34:** To raise the Seat height, first be sure the Seat Height Adjustment Knob is loose by turning it counter-clockwise. Now simply hold the Seat Handles and gently push with your legs until the Height Adjustment Knob locks into the next setting. Try each height setting until you have found a position that allows for a slight bend in the knee while your leg is fully extended and your toes are toward the top of the Pedals.

**Figure 35:** **ALWAYS** secure the Seat setting before using the FreeStep by turning the Height Adjustment Knob clockwise while in a hole setting.

# USER GUIDE

## Set Seat Back Position

The Seat Back can recline to offer support for the lower back while targeting different muscle groups during your workout. To properly set the Seat Back position, start with the seat in the fully upright position.

**Figure 36:** To adjust the Seat Back position, first push in on the Seat Back Adjustment Knob.



Figure 36



Figure 37

**Figure 37-38:** Slowly pull back on the Seat Back and let go of the Seat Back Adjustment Knob until the Knob snaps into a hole setting.

You may need to adjust the Seat Height to accommodate a reclined position.



Figure 38

## MODEL LT3 ONLY

### Modify Lower Seat Position (requires Allen Wrench to adjust)

**Figure 39:** The Lower Seat can be adjusted to a Forward or Back Position. The Forward Position will provide the largest surface area of support while seated.

The Lower Seat is bolted to the to the Seat Back Assembly with 4 × Bolts and is attached during the assembly process.

To adjust the Lower Seat, set the Seat Post Height to the tallest position for better access to the Bolts under the Lower Seat, and remove the 4 × Bolts with the Allen Wrench provided. Set the Bolts and Washers aside.



Figure 39

Adjust the Seat to the desired position and reassemble the Bolts and Washers. Refer to Figure 9 and 10 on Page 8 of the Assembly Instructions for more details on Bolt and Washer reassembly.

# USER GUIDE

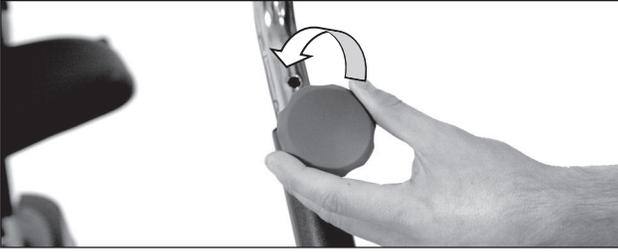


Figure 40

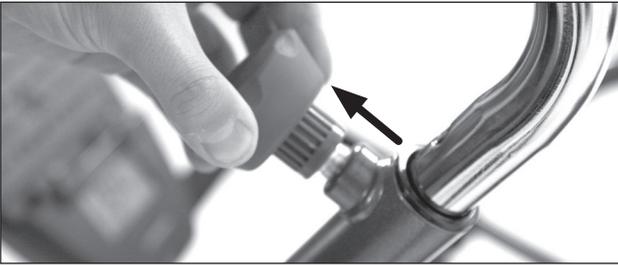


Figure 41



Figure 42



Figure 43



Figure 44

**Figure 43-44:** The Handle length should be set so that when your arms are fully extended, your back and shoulders remain in good posture and stabilized by the Seat Back.

Release the Handle Adjustment Knob into the desired hole setting. Secure the Handle by rotating the Handle Adjustment Knob clockwise.

# USER GUIDE

## Grip Position

The handles can be rotated to an **Upright Grip** or **Lower Grip** to target different muscle groups.

**Figure 45:** To change grip position, loosen the Handle Adjustment Knob by turning it counter-clockwise. Release the auto-locking mechanism by pulling outward on the Handle Adjustment Knob, then rotate the handles as desired.

Secure the Handle by rotating the Handle Adjustment Knob clockwise.

**Figure 46:** Adjust the Handles to the **Upright Grip** to target biceps, shoulders, and chest muscles with a forward pushing/pulling motion.

In this position, you have two options for hand placement: Overhand (shown) and Vertical.

**Figure 47:** Adjust the Handles to the **Lower Grip** to target triceps, forearms, and shoulder muscles with a downward pushing/pulling motion.

In this position, you have two options for hand placement: Overhand (shown) or Underhand.

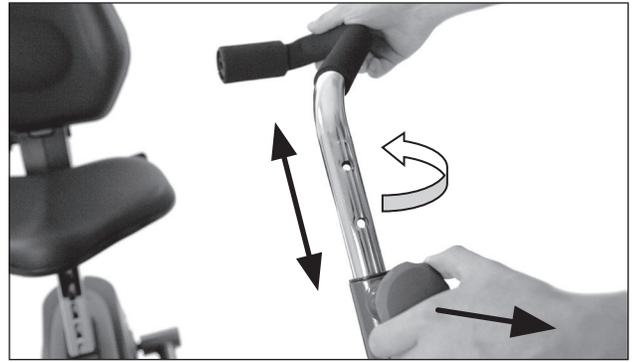


Figure 45



Figure 46



Figure 47

# USER GUIDE



Figure 48

## Standard Use

**Figure 48:** For a balanced, full-body workout, use both your arms and legs.

To avoid muscle fatigue, try shifting your exertion between muscle groups.

**Seat:** Adjust the Seat Height so your knees have a slight bend at full extension.

Align the Seat Back to support a straight, upright posture.

To vary the muscle focus for your core, glutes and legs, try reclining the Seat Back. See pg 14-15 for Seat Adjustment.

**Handles:** Adjust the handles to the Upright Grip.

To vary the muscle focus for your chest, back and arms, change your grip. See pg 16-17 for Handle Adjustment.



Figure 49

## Legs Only

**Figure 49:** Target your lower body by only using your legs.

**Seat:** Adjust the Seat Height so your knees have a slight bend at full extension.

Align the Seat Back to a reclined position to engage the glutes and quadriceps more.

**Handles:** Set the handles to the lowest outward position to keep them out of the way. Hold onto the Seat Handle behind the Seat.



Figure 50

## Arms Only

**Figure 50:** Target your upper body by only using your arms.

**Seat:** Adjust the Seat Height so you can comfortably rest your feet on the Console Front Support Bar with a slight knee bend.

Align the Seat Back to support a straight, upright posture.

**Handles:** Adjust the handles to the Lower Grip. Use the overhand hold to engage the triceps. Use the underhand grip to engage the biceps.

# USER GUIDE

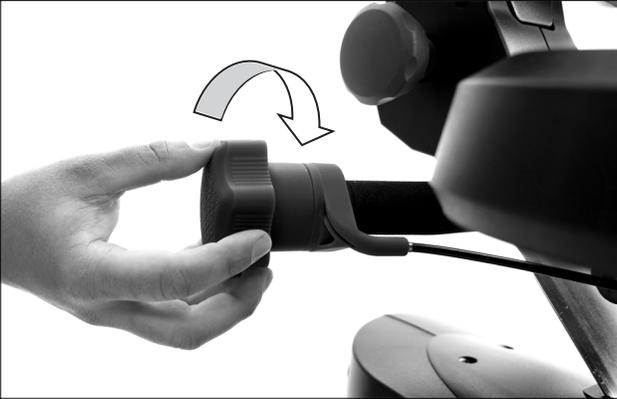


Figure 51

## Adjust Resistance

**NOTE:** The FreeStep ships to you preset in the highest resistance setting. Dial the Resistance Grip to the lowest resistance setting to start out.

**Figure 51:** To decrease resistance, dial the Resistance Grip counter-clockwise (or backward as you are using the equipment).

To increase resistance, rotate the Resistance Grip clockwise (or forward as you are using the equipment).



Figure 52

## Using the Console

**Figure 52:** When you begin to pedal, the Console will display readings based on your performance, showing the time (TMR), calories burned (CAL), distance (DST), and speed (SPD).

**NOTE:** The console arrives with the Units Toggle set to miles (MI), but it can be changed to kilometers (KM) if desired. To switch the units from MI to KM, follow the steps below:

Remove one or both of the batteries from the console so that the console no longer has power. Switch the Units Toggle located on the back of the console near the battery compartment to the desired unit of MI or KM. Reinstall the battery/batteries and the units will change on the console. If power is not off when switching the Units Toggle, the change will not take effect. When in the SPD or DST modes, a M or K will display on the console screen to the right of the digits informing you if you are in miles or kilometers, respectively.

**SCAN:** While pedaling, the Console will automatically scan through all the settings. To stop scanning automatically and to cycle through to the setting you want to see, press the Console Button.

**RESET:** To start at zero, holding down the Console button will reset your settings.

**STOP:** When you stop pedaling, the STOP will flash until you begin pedaling again. If you are done with your workout, the Console will automatically shut off.

This warranty applies to U.S. and Canada customers only. International customers should consult the local distributor for warranty information which will vary depending on the country.

Teeter warrants that this product is free from defects in materials and workmanship when used for the intended purpose under normal conditions and does not cover damage resulting from improper handling, assembly, or installation, repairs made by others, accident, misuse, or abuse. Warranty terms for products purchased in the U.S. or Canada are as stated below:

LT1	Structural Frame	2 years	Mechanical/Electrical Parts	1 years
LT3	Structural Frame	3 years	Mechanical/Electrical Parts	2 years

Throughout the terms of the warranty coverage, Teeter extends to the owner a repair and replacement warranty against manufacturing defects in materials and workmanship. Teeter will repair or replace any such defect and will pay the costs of all parts and transportation. If a repair or replacement is not commercially practical or cannot timely be made, then Teeter will, at the original Purchaser's option, replace with a comparable product or refund the purchase price.

Handling and transportation costs related to product warranty service only are covered by this warranty. Any replacement of the product under the terms of the Warranty in no way extends the original Warranty period. Under no circumstances shall Teeter, or any other party involved in the sale of this product, have any liability for incidental or consequential damage arising from breach of an express or implied warranty on any Teeter product.

**EXCEPT AS SET FORTH ABOVE, NO WARRANTY IS GIVEN WITH RESPECT TO ANY TEETER PRODUCT, AND ALL EXPRESS WARRANTIES ARE DISCLAIMED.** This warranty shall be governed by the laws of the State of Washington, USA. To the extent this warranty is found not to be enforceable, it shall be deemed revised to the extent necessary to make it enforceable. Any controversy or claim arising out of or relating to this warranty, its interpretation, or any alleged breach thereof, which cannot be amicably settled between Teeter and the owner within sixty (60) days of written notice by the aggrieved party to the other, shall be finally settled by arbitration submitted to three (3) arbitrators selected from the panels of the arbitrators of the American Arbitration Association located closest to Teeter's principal place of business.

Some states do not allow the exclusion of incidental or consequential damage from a warranty, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state / province to state / province. This warranty is completely transferable to any and all future owners of this product, provided no alterations have been made to the product.

## HOW TO SUBMIT YOUR REGISTRATION:

### Step 1

Fill out this information for your own records.

### Step 2

Go online to [teeter.com](http://teeter.com) to register your warranty.

\_\_\_\_\_   
 Date of Purchase

\_\_\_\_\_   
 Product & Model

\_\_\_\_\_   
 Dealer Name

\_\_\_\_\_   
 Serial No.

If you are unable to go online, you can request a warranty card to be mailed to you by calling Customer Service at 800-847-0143.

Please **DO NOT** mail this to Teeter.



This page intentionally left blank.

## TERMS & CONDITIONS OF PURCHASE

YOUR PURCHASE IMPLIES AGREEMENT TO THE FOLLOWING TERMS, which were made available to you prior to purchase via Teeter-owned web properties (including but not limited to teeter.com and forwarding URL's like tryteeter.com and tryfreestep.com) ("Sites") or by contacting Teeter Customer Service. Your purchase signifies your agreement to all terms, conditions, and notices contained or referenced herein. If you do not agree to these Terms of Use ("Terms"), you may return the product (unopened and unused), for a refund in accordance with the Teeter Return Policy within 90 days of your first order of any Teeter products. THESE TERMS CONTAIN AN ARBITRATION AGREEMENT AND CLASS ACTION WAIVER. READ THEM CAREFULLY, BECAUSE THEY AFFECT YOUR LEGAL RIGHTS.

**The terms and conditions marked with a \* only apply to purchases made direct from Teeter (via phone or Sites). If your purchase was made through a Teeter Authorized Dealer, the \* terms and conditions are dictated by that dealer.**

**CONTACT INFORMATION:** Teeter is authorized to use any phone number you provide to contact you for account maintenance and billing purposes.

**OUR GUARANTEE\*:** All of our products carry a specific money-back guarantee starting from the date that the product is delivered to you. Please review the information provided with your product for specific details. For information regarding product returns, please review our Return Policy below.

Teeter also offers a 30-Day Price Match Guarantee. If at any time within 30 days of placing your order, you find the same, new-condition model advertised in print or online by a Teeter authorized dealer for a lower price, send Teeter customer service a copy of the ad (dated and published within 30 days of placing your order) and they will either adjust your future payments for the new price or refund you the difference.

**SHIPPING\*:** Unless otherwise noted, Teeter will use commercially-practical efforts to ship products within a reasonable time after receipt of your properly completed order. Although Teeter may provide delivery or shipment timeframes or dates, you understand that those are good-faith estimates and may be subject to change. You further understand that product availability may be limited and particular products may not be available for immediate delivery, in which case the products will be delivered when available. Teeter shall not be liable for any loss, damage, cost, or expense related to any delay in shipment or delivery.

**AUTOMATIC RENEWAL / AUTO-SHIP PROGRAMS\*:** With regards to any product made available to you on an auto-renew or monthly (or other period) subscription as sold through the Site or otherwise (including any free trial product) (the "Product"), the default term of our agreement shall be for so long as we make the Product available to you. IF YOU HAVE PROVIDED US WITH A VALID CREDIT CARD NUMBER OR AN ALTERNATE PAYMENT METHOD, YOUR SUBSCRIPTION WILL BE AUTOMATICALLY RENEWED (AND CHARGED TO THE ACCOUNT YOU HAVE PROVIDED) FOR ANOTHER TERM AT THE EXPIRATION OF YOUR CURRENT TERM, WHENEVER LOCAL REGULATIONS ALLOW, FOR A FEE NO GREATER THAN OUR THEN-CURRENT PRICE, EXCLUDING PROMOTIONAL AND DISCOUNT PRICING.

The new term will be for the same duration as the expired term unless otherwise specified at time of renewal. This renewal will be processed (and your card charged) within 30 days prior to the expiration of the term and each period thereafter. IF YOU DO NOT DESIRE TO HAVE YOUR SUBSCRIPTION AUTOMATICALLY RENEWED, YOU MUST, PRIOR TO THE EXPIRATION OF YOUR SUBSCRIPTION TERM, INFORM US OF YOUR INTENTION NOT TO RENEW YOUR SUBSCRIPTION TO THE PRODUCT BY CALLING OUR CUSTOMER SERVICE.

You must provide current, complete, and accurate information for your billing account. You are responsible for ensuring this information is correct and must promptly update all information to keep your billing account current, complete, and accurate (such as a change in billing address, credit card number, or credit card expiration date). You must promptly notify us if your credit card is canceled (for example, for loss or theft). Changes to such information can be made by contacting Customer Service.

We reserve the right to refuse or discontinue the supply of the Product to any user at any time at our sole discretion.

**RETURNS\*:** If you wish to return your purchase, contact Teeter Customer Service and request a Return Authorization within 90 days (or within 30 days to avoid your first payment if financed), then follow the preceding return instructions. When an item is returned, the refund and how the refund is issued may differ based on the condition of the item, the timeframe, and how the item was purchased. Teeter offers a 90-day return window (from the date item is received) to return the product for a full refund (less return shipping and interest). Returns are allowed past the return window up to 120 days after receipt for partial credit of the original purchase price (see below). The customer is responsible for the cost of shipping the product back to Teeter unless the product is defective, in which case Teeter must be given the opportunity to offer warranty service or replace the product.

If You Return:	You'll Receive:
Item(s) in original condition within the return window (90-days from receipt after delivery)	100% of the item's price <sup>^</sup> (less shipping & handling, financing interest paid is non-refundable)
Item(s) in original condition past the return window (91-120 days. No returns are accepted past 120 days)	80% of the item's price <sup>^</sup> (financing will be refunded and separately charged a restocking fee equal to 20% of the purchase price)
Items that are returned damaged, missing parts, not in the original condition, or have obvious signs of use (reasons not due to a Teeter error)	Up to 50% of the item's price (financing will be refunded and separately charged a restocking fee equal to 50% of the purchase price)

<sup>^</sup> Refunds are for product only and do not include any processing, interest, shipping or handling fees. Freight on refused deliveries will be deducted from the credit or charged to account number on file.

Returns must have a valid Return Merchandise Authorization (RMA) number issued by Teeter. If merchandise delivery is refused without inspection, the refund will be for the purchase price, less all shipping charges (original and return) and trial fees. The product must be returned in original condition undamaged with all parts and support materials in its original carton. Refunds are for product only and do not include any processing fees, trial fees, shipping or handling fees. Freight on refused deliveries will be deducted from the credit. All return shipping charges must be prepaid; C.O.D. deliveries are not accepted. It is recommended that you acquire shipment tracking and insurance for the entire value of your product. We do not assume responsibility for merchandise damaged or lost during transit. Refunds are issued after a product is received and inspected; processing can take up to ten (10) days. For products on a multi-payment plan, payments will continue to charge to the credit card on file until the product is received and processed at our warehouse. Refunds, including gift returns, are made in the same form as the original payment for purchase. Please allow up to eight (8) weeks for your bank or credit card company to post this refund on your statement. Merchandise returned without a valid RMA number or in violation of this policy will not qualify for a refund. Teeter will discard the product and the customer will be responsible for any remaining payment due.

All shipments leave the Teeter warehouse in good condition. Any damage, shortages, or product lost in transit should be reported to Teeter within fourteen (14) days.

**PRODUCT DESCRIPTIONS AND PRICING\*:** For questions about Teeter products or services, or for questions about orders placed through the Sites or otherwise, please contact Teeter Customer Service at 800-847-0143 or email at [info@teeter.com](mailto:info@teeter.com).

Teeter and its affiliates attempt to be as accurate as possible. However, Teeter does not warrant that product descriptions or other content is accurate, complete, reliable, current, or error-free. If a product offered by Teeter itself is not as described, your sole remedy is to return it in unused condition.

In ordering products, you agree to provide only true, accurate, current, and complete information. You hereby certify that any e-mail account you provide to Teeter is registered to you. Teeter reserves the right to bar your access to and use of the Sites or further business transactions if it has reasonable grounds to believe that you have provided untrue, inaccurate, not current, or incomplete information to Teeter. You agree that if you are ordering or purchasing products on behalf of a company, that you have sufficient authority to bind that company to the Terms. You agree that your placement of an order is sufficient to satisfy the Statute of Frauds, and no further writing is required.

All prices are quoted in U.S. dollars. Teeter may prohibit delivery to addresses outside the United States and Canada. Teeter will add shipping and handling fees and applicable sales/use tax. Products are available while supplies last. Descriptions of, or references to, products not owned by Teeter do not imply endorsement of that product, or constitute a warranty, by Teeter.

**TAXES:** For current sales tax collection information, go to [teeter.com/support/tax-disclaimer](http://teeter.com/support/tax-disclaimer).

**DISPUTE RESOLUTION BY INDIVIDUAL BINDING ARBITRATION:** You and Teeter agree that any dispute between us (including disputes against any agent, employee, subsidiary, affiliate, predecessor in interest, successor, or assign of the other) relating to the Sites; any transaction or relationship between us resulting from your use of the Sites; the purchase, order, installation, or use of Teeter products or services; or communications between us; will be resolved exclusively and finally by binding arbitration and the arbitration decision may be enforced and judgment entered thereon in any court of competent jurisdiction. You and Teeter further agree that this arbitration agreement is made pursuant to a transaction involving interstate commerce and shall be governed by the Federal Arbitration Act (“FAA”), and not by any state law concerning arbitration. You and Teeter further agree that any determination regarding the applicability, enforceability, or validity of this arbitration agreement will be made by the arbitrator, not by any court. BY AGREEING TO THIS ARBITRATION AGREEMENT, YOU ARE GIVING UP YOUR RIGHT TO GO TO COURT, INCLUDING YOUR RIGHT TO A JURY TRIAL. In arbitration, a dispute is resolved by a neutral arbitrator or panel of arbitrators, rather than by a judge or jury. Arbitration is more informal; however, an arbitrator can award the same relief that a court can award. The arbitration will be administered by the American Arbitration Association (“AAA”), and conducted under AAA’s Commercial Arbitration Rules and the Supplementary Procedures for Consumer Related Disputes (collectively, the “AAA Rules”) then in effect at the time of the dispute. You may obtain copies of the AAA Rules and forms and instructions for initiating arbitration by visiting the AAA website at [www.adr.org](http://www.adr.org), or by calling AAA at 800-788-7879. If you initiate arbitration, Teeter will promptly reimburse you for any standard filing fee which may have been required under AAA’s Procedures once you have notified Teeter in writing and provided a copy of the arbitration proceedings. However, if Teeter is the prevailing party in the arbitration, applicable law may allow the arbitrator to award attorneys’ fees and costs to Teeter. If for any reason the AAA is unavailable, the parties shall mutually select another arbitration forum. There shall be no right or authority for any claim to be arbitrated on a class action basis or in a purported representative capacity. No claim submitted to arbitration is heard by a jury or may be brought as a private attorney general. You do not have the right to act as a class representative or participate as a member of a class of claimants with respect to any claim submitted to arbitration. The arbitrator may not consolidate more than one person’s claims against Teeter and may not preside over any kind of representative or class proceeding against Teeter. You acknowledge that this class action waiver is material and essential to the arbitration of any disputes between the parties and is nonseverable from the agreement to arbitrate claims. If any portion of this class action waiver is limited, voided, or cannot be enforced, then the parties’ agreement to arbitrate shall be null and void. YOU UNDERSTAND THAT BY AGREEING TO THIS CLASS ACTION WAIVER, YOU MAY ONLY BRING CLAIMS AGAINST US IN AN INDIVIDUAL CAPACITY AND NOT AS A PLAINTIFF OR CLASS MEMBER IN ANY PURPORTED CLASS ACTION OR REPRESENTATIVE PROCEEDING. IF YOU DO NOT AGREE TO THIS ARBITRATION AGREEMENT AND CLASS ACTION WAIVER, YOU MUST TELL US IN WRITING, NOT USE THE SITES OR TEETER PRODUCTS, AND RETURN THE PRODUCT (UNOPENED AND UNUSED) FOR A REFUND IN ACCORDANCE WITH THE TEETER RETURN POLICY WITHIN 30 DAYS OF YOUR FIRST ORDER OF ANY TEETER PRODUCTS.

**INDEMNIFICATION:** NOT ALL HEALTH AND FITNESS PROGRAMS/PRODUCTS ARE SUITABLE FOR EVERYONE AND THIS OR ANY PRODUCT MAY RESULT IN INJURY. CONSULT YOUR DOCTOR BEFORE UTILIZING THIS OR ANY HEALTH OR FITNESS-RELATED PROGRAM/PRODUCT.

To reduce the risk of injury, read and understand the User Guide and/or all accompanying product support before use. If you experience pain or discomfort during use, stop immediately and consult your doctor.

You hereby fully release and agree to indemnify and hold harmless Teeter, its parents, subsidiaries, affiliates, successors, assigns, and their respective officers, directors, members, shareholders, employees, agents, and suppliers from any claim, action, demand, loss, or damages (including attorneys’ fees) arising out of or relating to your use of the Sites, the products, exercises, instructions, or advice on the Sites, or your violation of these Terms or the rights of any third party in connection with the foregoing.

Although Teeter strives to prevent the introduction of viruses and other malware to this Site, Teeter does not warrant, guarantee, or make any representation that the Sites are free of destructive materials. Further, Teeter does not warrant or guarantee that access to this site will be uninterrupted, timely, secure, or error-free, or that defects, if any, will be corrected.

**DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY FOR USE OF WEBSITE, IF APPLICABLE:** The information, products and services on the Teeter Sites are provided on an “AS IS,” and “AS AVAILABLE” basis. Teeter does not warrant the information or services provided herein or your use of the Sites generally, either expressly or impliedly, for any particular purpose and expressly disclaims any implied warranties, including but not limited to, warranties of title, non-infringement, merchantability or fitness for a particular purpose. Teeter will not be responsible for any loss or damage that could result from interception by third parties of any information or services made available to you via the Sites. Although the information provided to you on the Sites is obtained or compiled from sources we believe to be reliable, Teeter cannot and does not guarantee the accuracy, validity, timeliness or completeness of any information or data made available to you for any particular purpose. Neither Teeter nor any of its parents, subsidiaries, affiliates, successors, assigns, and their respective officers, directors, members, shareholders, employees, agents, suppliers, nor any third party vendor, will be liable or have any responsibility of any kind for any loss or damage that you incur in the event of any failure or interruption of the Sites, or resulting from the act or omission of any other party involved in making the Sites, the data contained herein or the products or services offered on the Sites available to you, or from any other cause relating to your access to, inability to access, or use of the Sites or these materials, whether or not the circumstances giving rise to such cause may have been within the control of Teeter or of any vendor providing software or services. In no event will Teeter or any such parties be liable to you, whether in contract or tort, for any direct, special, indirect, punitive, consequential or incidental damages, attorney fees, or any other damages of any kind even if Teeter or any other such party has been advised of the possibility thereof. This limitation on liability includes, but is not limited to, the transmission of any viruses which may infect a user’s equipment, failure of mechanical or electronic equipment or communication lines, telephone or other interconnect problems (e.g., you cannot access your internet service provider), unauthorized access, theft, operator errors, strikes or other labor problems or any force majeure. Teeter cannot and does not guarantee continuous, uninterrupted or secure access to the Web site.

**COPYRIGHT:** All content included on Teeter Sites, product, and product support, including design, product descriptions, and multimedia content, is the property of Teeter or its content suppliers and protected by United States and international copyright laws.

**TRADEMARKS:** Teeter, Teeter Move, FreeStep, FitSpine, FitForm, Power 10, DEX, Flex Technology, EZ-Up, ProFlex, “Feel Better, Move Better, Live Better”, “Better Back, Better Body” and other Teeter trademarks and service marks referenced on Sites or in commerce are registered by Teeter. The names of other companies and marks used on third-party products or services mentioned herein may be registered trademarks and service marks or trademarks and service marks of their respective companies and/or owners.

You are prohibited from using our trademarks (and any third-party trademarks) for any purpose including, but not limited to use as meta tags on other pages or sites on the World Wide Web without the written permission of Teeter or such third party, which may own the marks.

**PRIVACY POLICY\*:** Users of Teeter Sites should refer to the Teeter online Privacy Policy for information about how Teeter uses and collects information. You agree that Teeter may disclose your personal information to a third party if Teeter believes in good faith that the law or legal process requires it, to protect the rights or property of Teeter or others, or as otherwise described in the Teeter Privacy Policy at [teeter.com](http://teeter.com).

**JURISDICTION:** These Terms, as well as the Privacy Policy for the Sites, and any dispute that may arise between you and Teeter, shall be governed by and construed in accordance with the laws of the State of Washington, U.S.A., without regard to conflict of laws principles.

Unless otherwise specified herein, these Terms and the Site’s Privacy Policy constitute written agreements between you and Teeter and supersedes all prior or contemporaneous communications and proposals (whether oral, written, or electronic) between you and Teeter. A printed version, and of any electronic notices pertaining to the same, shall be admissible in a judicial or administrative proceeding to the same extent, and subject to the same restrictions, as any other contract, document or record originally in printed form.

If any provision of these Terms shall be deemed unlawful, void, or for any reason unenforceable, then that provision shall be deemed severable from these Terms and shall not affect the validity and enforceability of any remaining provisions.

The terms of this section survive any termination of the Terms.

This page intentionally left blank.



# Coaching Every Step of the Way



TEETER MOVE®

Access workouts and instructions anytime, anywhere. Our guided personal training is available to you with the free Teeter Move app.

Designed to help you stay motivated and moving forward in your strength, endurance, and mobility training.



## LX9™ Inversion Table

The premier Teeter Inversion Table featuring the FlexTech™ 8-Pt Floating Suspension Bed that flexes as you move, Deluxe EZ-Reach™ Handle to reduce the need for bending, and so much more!



## Power10® Elliptical Rower

Torch more calories and enhance muscle definition with one revolutionary rower. The patented elliptical path offers bi-directional resistance so you can engage more muscles with every workout.



## FitForm™ Cable Trainer

Total body strengthening in one small package! Work your arms, legs and core with micro-adjusting resistance up to 65 lb.




## Heavy-Duty Equipment Mat

Protect your floors from wear and tear, and extend the life of your equipment by preventing floor dust and debris from getting into moving parts.



## Better Back™ Foam Rollers

Prepare the body for movement, accelerate recovery, minimize muscular imbalances, and improve overall flexibility with the Teeter collection of textured Foam Rollers.

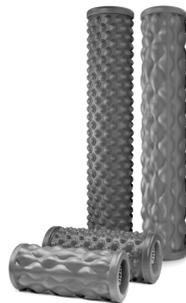

## Neck Relax & Restore Duo™

Provides support of the upper neck/cervical spine for self-administered suboccipital release, a technique to reduce tension in the supporting muscles.



If you have any trouble assembling the equipment, or questions about its use, please contact customer service at

**800-847-0143**

**[info@teeter.com](mailto:info@teeter.com)**

